



Handling and Storage

1. Johnsonite flooring and adhesives must be site conditioned at room temperature for 48 hours prior to, during, and after installation. Room temperature must be maintained between 65° and 85°F (18° and 30°C) with HVAC system operating. A minimum temperature of 55°F (13°C) must be maintained afterwards. The ambient relative humidity should be between 40% and 60%.
2. In areas that are exposed to intense or direct sunlight, the product must be

protected during the conditioning, installation, and adhesive curing periods, by covering the light source.

3. The highest quality of materials and workmanship is employed in the manufacture of Johnsonite Flooring and careful inspection is made before shipment. However, a quality installation is the responsibility of the installer. It is the installer's responsibility to verify the accuracy of the order and to ensure the

materials are checked for damage, defects, and satisfactory color match. An authorized Johnsonite distributor or Johnsonite representative must be notified of any defects before installation proceeds.

4. Johnsonite cannot accept responsibility for any loss or damage that may result from the use of this information, due to processing or working conditions and/or workmanship outside our control. Users are advised to confirm the suitability of this product by their own tests.

General Subfloor Preparation

1. **All subfloors** must be clean, smooth, flat and dry. The surface must be free of all dust, loose particles, solvents, paint, grease, oil, wax, alkali, sealing/curing compounds, old adhesive, and any other foreign material, which could affect installation.

Caution: Do not use oil based sweeping compounds. Fill all depressions, cracks, and other surface irregularities with a good quality Portland cement based underlayment patching compound.

NOTE: Contamination on the substrate can cause damage to the resilient flooring material. Permanent and non-permanent markers, pens, crayons, paint, etc., must not be used to write on the back of the flooring material or used to mark the substrate as they could bleed through and stain the flooring material. If these contaminants are present on the substrate they must be mechanically removed prior to the installation of the flooring material.

Caution: Do not use liquid solvents or adhesive removers.

Johnsonite does not recommend installing over existing resilient floors. All existing flooring and adhesives must be removed prior to installing the new flooring material. Remove existing adhesive mechanically – do not use chemical adhesive removers or solvents.

Caution: Do not install rubber flooring in areas that are exposed to grease, oil or animal fats.

Caution: Some resilient flooring products and adhesives contain "asbestos fibers" and special handling of this material is required.

2. **Concrete subfloors** must be constructed as recommended by the American Concrete Institute's ACI 302.2 "Guide for Concrete Slabs that Receive Moisture-Sensitive Flooring Materials" and prepared

to receive resilient flooring according to ASTM F 710 "Standard Practice for Preparing Concrete Floors to Receive Resilient Flooring".

Do not install Johnsonite flooring over expansion joints.

All concrete subfloors must be tested for moisture, pH (alkalinity), and proper adhesive bond:

Moisture tests shall be conducted in accordance with ASTM F 1869 "Standard Test Method for Measuring Moisture Vapor Emission Rate of Concrete Subfloor Using Anhydrous Calcium Chloride" or ASTM F 2170 "Standard Test Method for Determining Relative Humidity in Concrete Floor Slabs using *in situ* Probes". Three tests should be conducted for areas up to 1,000 sq. ft. and one additional test should be conducted for each additional 1,000 sq. ft. of flooring.

- ◆ Results must not exceed 5 lbs. per 1,000 sq. ft. in 24 hours when tested to ASTM F 1869, or exceed 80% when tested to ASTM F 2170.

If the tests results exceed the limitations, the installation must not proceed until the problem has been corrected.

- ◆ A pH test for alkalinity must be conducted. Results should range between 7 and 9. If the test results are not within the acceptable range of 7 to 9, the installation must not proceed until the problem has been corrected.

An adhesive bond test should be performed using the actual flooring materials and adhesive to be installed. The test areas should be a minimum of 36" x 36" and remain in place for at least 72 hours and then evaluated for bond strength to the concrete.

3. **Wood subfloors** must have a minimum 18" (47 cm) of cross-ventilated space between the bottom of the joist and

ground. Exposed earth crawl spaces should be sealed with a polyethylene moisture barrier.

Subfloors should meet local and national building codes. Trade associations, such as the APA "The Engineered Wood Association", offer structural guidelines for meeting various code requirements.

Single Wood and Tongue and Groove subfloors should be covered with 1/4" (6.4 mm) or 1/2" (13 mm) APA approved underlayment plywood. Use 1/4" (6.4 mm) thick underlayment panels for boards with a face width of 3" (76 mm) or less. For boards wider than 3" (76 mm) face width use 1/2" (13 mm) underlayment panels.


Countersink nail heads and fill depressions, joints, cracks, gouges, and chipped edges with a good quality Portland cement based patching compound.

Do not install over OSB (Oriented Strand Board), particle board, chipboard, lauan or composite type underlayments.

4. **Terrazzo and Ceramic floor** surface must be thoroughly sanded to remove all glaze and waxes. Remove or replace all loose tiles and clean the grout lines. Use a Portland cement based leveling compound to fill all grout lines and other depressions.
5. **Steel floor** surface must be mechanically abraded to assist with the adhesive bond. The floor must be cleaned to remove all dirt, rust and other contaminants. When applying adhesive the non-porous installation instructions must be followed.
6. **Concrete floors equipped with a radiant heating system:** Turn the heat down to 65°F (18°C) for at least 48 hours before installation. Heat may be gradually returned to operating temperature 48 hours after installation. Temperature should not exceed 85°F (30°C).

Carpet Threshold Installation

1. Cut the Carpet Threshold Moulding to fit the width of the door frame opening.
2. Apply a uniform coat of Johnsonite 946 Premium Contact Adhesive to the back of the Carpet Threshold and the floor surface. Allow the adhesive to dry to the touch.
3. Carefully position the threshold and install to the floor surface. Roll the threshold with a 2" wide J-hand roller to ensure proper adhesion to the floor surface.
4. Cut two sections of tack strip to the required length and position on the tack strip mounting wings of the threshold with the carpet nails facing to the center of the threshold. Secure the tack strips with the nails provided with the tack strip through the mounting wings and into the substrate (**Figure 1**).
5. Stretch the carpet and secure the carpet to the tack strip nails on either side of the threshold.
6. Trim and tuck the excess carpet into the carpet receiver openings on either side of the threshold.
7. Note: For double glue installations, install and adhere the carpet pad over the threshold wing extensions and then adhere the carpet to the carpet pad as normal. Trim and tuck the excess carpet into the receiver openings on either side of the threshold.

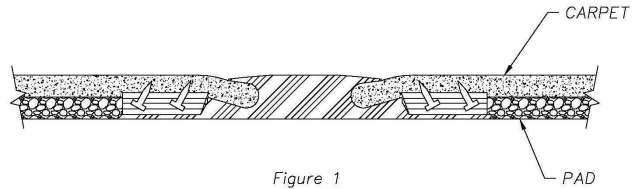

Adhesive Clean Up

Excess adhesive should be removed during the installation process.

946 Premium Contact Adhesive

- ◆ Use a clean white cloth dampened with water to remove wet adhesive from chair rail, substrate, floor covering and tools.
- ◆ Dried adhesive may require the use of denatured alcohol applied to a clean white cloth. (Follow manufacturer's precautions when using denatured alcohol.)

Maintenance

1. Wait 72 hours after installation before performing initial cleaning.
2. A regular maintenance program must be started after the initial cleaning.
3. Johnsonite Carpet Threshold is maintained with regular wiping using a wet, clean, soft, white cloth.
4. A mild detergent may be added to the water.
5. Coarse scrubbing media or harsh cleaning

chemicals may damage the surface of the Carpet Threshold.

For further questions please contact Johnsonite Technical Services Department at 1-800-899-8916.

 **Johnsonite**
A Tarkett Company

THE ULTIMATE
FLOORING EXPERIENCE

Technical Services Department
16910 Munn Road, Chagrin Falls, Ohio 44023
(800) 899-8916 ext 9297 Fax (440) 632-5643
www.johnsonite.com
email: info@johnsonite.com
© 2012 Johnsonite Inc.